

DIFFICULTY: MODERATE

EST. TIME: 60 MIN

PART # TI-0821



Install video: <https://youtu.be/yIBaPbFeMA4?si=GglDrOxtjkcbp6tN>

TOOLS REQUIRED

- 4MM HEX KEY
- 1/2" WRENCH

PARTS INCLUDED


- M6 - 45MM CSH – 4 pcs
- F1" ALUMINUM SPACERF – 4 pcs
- RIVET NUT - M6 – 6 pcs
- M6 - 65MM CSH – 2 pcs
- 1/2" ALUMINUM SPACER – 2 pcs
- M6 - FLANGE NUT – 2 pcs
- M6 - 20MM CSH – 4 pcs
- JACK NUT - M6 – 6 pcs
- FENDER WASHER – 1 pcs
- CONSOLE MOLLE – 1 pcs
- DRIVER ARM - CONSOLE – 1 pcs
- PASSENGER ARM - CONSOLE – 1 pcs
- 1" ALUMINUM SPACER – 4 pcs

INSTALLATION STEPS



INSPECT POWDER COAT 5 min


Look over finish and set aside any product that has defect

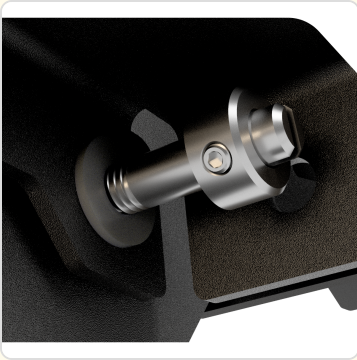

1

CONSOLE MOLLE HARDWARE 5 min

CONSOLE MOLLE
ADJUSTABLE CENTER CONSOLE
CAN-AM DEFENDER

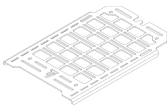

BIN
S7

M6 14MM SCREW
BLACK

QTY

4

BIN
N1

M6 RIVET NUT
BLACK

QTY

4

BIN
AS1

1" ALUMINUM SPACER
BLACK

QTY

4

HARDWARE KIT

BOX 20F BAG WITH CONSOLE HARDWARE STICKER

1 MOLLE HARDWARE BAG

1 ARMS HARDWARE BAG

1 10 FENDER WASHERS BLACK

1 TRAIL ICON STICKER

RIV NUT TOOL

ADD RIVNUT TOOL KIT TO SOME BAGS AND KEEP
SEPARATE FROM NON-RIVNUT TOOL HARDWARE KITS

9/28/24 V2

TRAIL ICON – ADJUSTABLE CONSOLE. Follow all safety warnings. If you are unsure about any step, contact support before proceeding.